
Network Regulator Maintenance Operatives LS (Non-Accredited)

Background

- Network Maintenance Operative (NMO) would be trained to perform work on pressure reducing
 equipment upstream of the ECV on pressures ranging over HP, IP & MP. This type of work is
 undertaken on GT sites that regulate pressures to cities or towns; in addition this also covers
 pressure reducing equipment that feeds villages, individual properties and non-domestic
 properties upstream of the ECV.
- An operative's competence is measured against in house assessments which are part of the safety case submitted to the HSE and OFGEM in order for the Gas Distribution Network (GDN) to work under a Licence to Operate allowing GDN to transport gas.
- All NMO hold a NVQ Level 3 Diploma in Engineering Maintenance, the qualification takes three years to complete, once complete a new operative should be shadowed for a period of six months before undertaking any network activities on their own.

Scope

- To undertake routine inspections on single and twin stream MP LP fed regulators downstream of the ECV at non domestic properties. This involves undertaking working pressure readings only of the regulators. In the instances of twin regulators each stream will be tested independently. There is no requirement to interrupt the gas supply to the property.
- Undertake functional checks on single and twin stream MP LP fed regulators downstream of
 the ECV at non domestic properties. This involves testing working pressures and functional test
 of slam shut safety devices, which as a consequence will interrupt the downstream supply.
 Single stream installations will require an appropriately qualified First Call Operative (FCO) to
 be on site at all times to perform purge and relight activities in accordance with responsible
 person on site. This also applies to situations where regulators require exchanging or
 mechanical operating parts upgrading.
- Functional inspections (test slam shut pressures and function of slam shut, inspect loading spring of regulator, etc.). Twin stream will be alternated between streams for maintenance ensuring no loss of supply

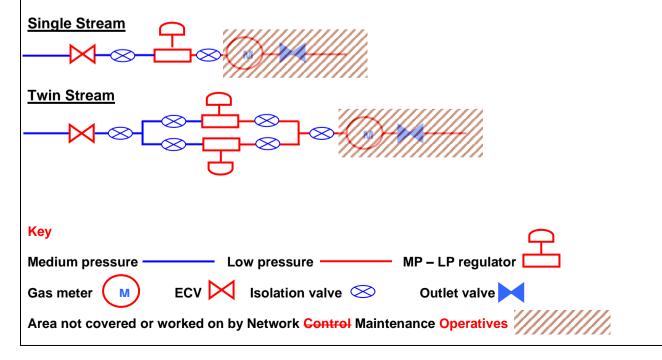

Exclusions:

 The NMO is not qualified to work on the meter installation in regards testing, purging and relighting of any appliances. If the supply is to be interrupted on planned work a competent FCO will work alongside the NMO to ensure the supply is reinstated and cause minimal disruption to the downstream customer. In instances where a NMO identifies a potential downstream problem, e.g. inadequate pressure. He / she will cease work and call for the assistance of a competent FCO.

Pre-requisites:

NVQ Level 3 Diploma in Engineering Maintenance

To facilitate this practical assessment, it may be of benefit for a suitable 'On the Job' site to be selected Written scenario providing details of the installation design, network supply, settifor meter regulators, creep relief and SSVs, as appropriate, and extent of hazard area zoning for relief valve vent stacks Appropriate pre-assembled strength tested (certificated) MP single and twin stre regulator/control rig. Diaphragm meter; with appropriate active pressure regulator, monitor regulator, SSVs, relief valves and filters: Medium pressure gas supply (may be simulated using compressed air with a controlled discharge point). Twin streaming with active and monitor regulators. Candidates can demonstrate setting of each regulator to the MIs and installation design requirements. Steel pipework, flanges, gaskets, regulators, relief valves, SSVs, filters, fittings a valves suitable and safe for the conditions of intended use and complying with a relevant specifications and Standards (regulator only) Range of suitable and unsuitable fittings and materials to complete installation e regulator seals. Note: this would only apply to the single or twin stream regulator, the meter installation is not included Regulator/control MIs Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)	ngs			
Selected Written scenario providing details of the installation design, network supply, setting for meter regulators, creep relief and SSVs, as appropriate, and extent of hazard area zoning for relief valve vent stacks	nas			
for meter regulators, creep relief and SSVs, as appropriate, and extent of hazard area zoning for relief valve vent stacks 2	กดร			
regulator/control rig. Diaphragm meter; with appropriate active pressure regulator, monitor regulator, SSVs, relief valves and filters: Medium pressure gas supply (may be simulated using compressed air with a controlled discharge point). Twin streaming with active and monitor regulators. Candidates can demonstrate setting of each regulator to the MIs and installation design requirements. Steel pipework, flanges, gaskets, regulators, relief valves, SSVs, filters, fittings a valves suitable and safe for the conditions of intended use and complying with a relevant specifications and Standards (regulator only) Range of suitable and unsuitable fittings and materials to complete installation e regulator seals. Note: this would only apply to the single or twin stream regulator, the meter installation is not included Regulator/control MIs Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)	•			
SSVs, relief valves and filters: Medium pressure gas supply (may be simulated using compressed air with a controlled discharge point). Twin streaming with active and monitor regulators. Candidates can demonstrate setting of each regulator to the MIs and installation design requirements. Steel pipework, flanges, gaskets, regulators, relief valves, SSVs, filters, fittings a valves suitable and safe for the conditions of intended use and complying with a relevant specifications and Standards (regulator only) Range of suitable and unsuitable fittings and materials to complete installation e regulator seals. Note: this would only apply to the single or twin stream regulator, the meter installation is not included Regulator/control MIs Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)	am			
controlled discharge point). Twin streaming with active and monitor regulators. Candidates can demonstrate setting of each regulator to the MIs and installation design requirements. Steel pipework, flanges, gaskets, regulators, relief valves, SSVs, filters, fittings a valves suitable and safe for the conditions of intended use and complying with a relevant specifications and Standards (regulator only) Range of suitable and unsuitable fittings and materials to complete installation e regulator seals. Note: this would only apply to the single or twin stream regulator, the meter installation is not included Regulator/control MIs Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)	ļ			
valves suitable and safe for the conditions of intended use and complying with a relevant specifications and Standards (regulator only) Range of suitable and unsuitable fittings and materials to complete installation e regulator seals. Note: this would only apply to the single or twin stream regulator, the meter installation is not included Regulator/control MIs Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)				
regulator seals. Note: this would only apply to the single or twin stream regulator, the meter installation is not included Regulator/control MIs Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)				
Access to IGEM/GM/8 Parts 1 to 5 Edition 2; GM/7A & 7B; IGEM/UP2 Edition 3: HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: Adjusting controls to prescribed set points (regulator only) Completing necessary safety checks on equipment provided (regulator only)	g.			
HSL56; IGEM/UP1 (Appliance Pipework Connection Test only) Enable demonstration of: 1 Adjusting controls to prescribed set points (regulator only) 2 Completing necessary safety checks on equipment provided (regulator only)				
1 Adjusting controls to prescribed set points (regulator only) 2 Completing necessary safety checks on equipment provided (regulator only)				
2 Completing necessary safety checks on equipment provided (regulator only)	Enable demonstration of:			
3 Ensuring notices and labels are correctly displayed				
5 Ensuring notices and labels are correctly displayed				
4 Ensuring regulators and safety devices have been correctly sealed				
5 Ensuring High pressure gas is safely removed from installation (bleed plug)				
G Jointing of intermediate pressure pipework with flange and union fittings (regulationly)	or			
7 Setting SSVs/relief valves				
8 Setting active and monitoring regulators to determined set points				
9 PAWS may be used containing a series of written scenarios, drawings, slides are photographs etc.	ıd			

1. Ga	s Safety Legislation and Standards
	vledge & Understanding
1	HSL56
i	Reg.2 General interpretation and application 2(1), (3)
ii	Reg.3 Qualification and supervision 3(1), (2), (3), (6), (7) and (8)
iii	Reg.4 Duty on employer
iv	Reg.5 Materials and workmanship 5(1) to (3)
V	Reg.6 General safety precautions 6(1) to (6)
vi	Reg.7 Protection against damage 7(1) to (3)
vii	Reg.8 Existing gas fittings 8(1) to (3)
2. Ga	s Emergency Actions and Procedures
Know	vledge & Understanding
1	Priorities of actions and responsibilities:
i	action to stop a gas escape downstream of ECV
ii	action if gas continues to escape after turning off supply
2	Limits of flammability
3	Specific gravity and its effect in relation to air
4	Hazardous ignition sources and their elimination
5	Methods of preventing/reducing dangerous concentrations of gas in atmosphere
6	Advice to occupants
7	HSL56 Reg.37 Escape of gas 37(1) to (4)
3. Ins	tallation of Pipework and Fittings
	rmance Criteria
1	Join steel pipe using appropriate union fittings, methods and agents (regulator only)
2	Connect threaded joint with washer using appropriate fittings, methods and agents (regulator only)
3	Join steel pipe using flanges and appropriate jointing material (regulator only)
4	Use of temporary earth continuity bond
5	Check pipework (disturbed joints) is gas tight - LDF and Appliance Pipework Connection Test (regulator only)
6	Purge pipework of air and apply protective coating if necessary (regulator only) Supplementary oral questions will satisfy this PC
Know	vledge & Understanding
1	Jointing agents for threaded and connections with washers
2	Mild steel pipe and fittings
3	Flexible and rigid connections
4	Pipe supports, clips and fixing for outside pipework
5	Main equipotential bonding (requirement)
6	HSL56
i	Reg.10 Maintaining electrical continuity
iv	Reg.20 Protection of buildings (meter housings only)
vii	Reg.23 Marking of pipes 23 (1) and (2)
7	Purpose and suitability of using a non-contact voltage tester (TB 118)

Obtain and study details of the installation design Obtain and study details of the installation design Obtain correct information concerning network to which installation is to be connected Check details for settings for meter regulators, creep relief and SSVs are available Check new control train (regulators, valves, safety devices and the inlet assembly) has been strength tested at minimum pressure of 3 bar Check certificate confirming date and results of strength test Identify and assemble regulators, valves and safety devices, to MIs, and system design plan Identify extent of hazardous area zoning for relief valve vent stacks and position stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight- LDF and Appliance Pipework Connection Test Purge installation (regulator only) Carry out functionality tests on train controls, to MIs (regulator only) check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points — metering pressure — single stream meter installation — Figures 20/21 IGE/GM/8 Part 1 is set active regulator at determined set point set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system set active regulator at determined set point set active regulator at determined se	4. Ch	ecking and/or Setting Regulators
Dotain correct information concerning network to which installation is to be connected Check details for settings for meter regulators, creep relief and SSVs are available Check new control train (regulators, valves, safety devices and the inlet assembly) has been strength tested at minimum pressure of 3 bar Check certificate confirming date and results of strength test Identify and assemble regulators, valves and safety devices, to MIs, and system design plan Identify extent of hazardous area zoning for relief valve vent stacks and position stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight-LDF and Appliance Pipework Connection Test Purge installation (regulator only) Carry out functionality tests on train controls, to MIs (regulator only) Carry out functionality tests on train controls, to MIs (regulator only) commissioning - General i check all components function correctly to MIs (regulator only) check safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves check set points of regulators under flow conditions (simulation can be used) Set points - metering pressure - single stream meter installation - Figures 20/21 IGE/GM/8 Part 1 is set active regulator at determined set point is est SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) check SSV set point plus accuracy group tolerance (MIP) s STP of downstream system check sSV set point plus accuracy group tolerance (MIP) s STP of downstream and SSV to ensure relief valve set point set set monitor regulator at determined set point set set monitor engulator at determined set point set set monitor engulator at determined set point is set set monitor solutions. Set points - metering pressure (twin stream installation, IGE/GM/8 Part 1) set active regulator at determined set		
connected Check details for settings for meter regulators, creep relief and SSVs are available Check new control train (regulators, valves, safety devices and the inlet assembly) has been strength tested at minimum pressure of 3 bar Check certificate confirming date and results of strength test Identify and assemble regulators, valves and safety devices, to MIs, and system design plan Identify extent of hazardous area zoning for relief valve vent stacks and position stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight- LDF and Appliance Pipework Connection Test Purge installation (regulator only) Carry out functionality tests on train controls, to MIs (regulator only) Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points - metering pressure - single stream meter installation - Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 4 Set points - metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set monitor regulator at determined set point iii set monitor regulator at determined set point iii set monitor set determined set point iii set monitor set determined set point iii set monitor set determined set point iii set monitor regulator at determined set point iii set monitor set determined set point iii set monitor regulator at determined set point iii set m	1	Obtain and study details of the installation design
A Check new control train (regulators, valves, safety devices and the inlet assembly) has been strength tested at minimum pressure of 3 bar Check certificate confirming date and results of strength test Identify and assemble regulators, valves and safety devices, to MIs, and system design plan Identify extent of hazardous area zoning for relief valve vent stacks and position stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight- LDF and Appliance Pipework Connection Test Chery out functionality tests on train controls, to MIs (regulator only) Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points - metering pressure - single stream meter installation - Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system Set points - metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	2	
has been strength tested at minimum pressure of 3 bar Check certificate confirming date and results of strength test Identify and assemble regulators, valves and safety devices, to MIs, and system design plan Identify extent of hazardous area zoning for relief valve vent stacks and position stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight- LDF and Appliance Pipework Connection Test Purge installation (regulator only) Carry out functionality tests on train controls, to MIs (regulator only) Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 4 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point iii set monitor regulator at determined set point iii set sSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	3	Check details for settings for meter regulators, creep relief and SSVs are available
Identify and assemble regulators, valves and safety devices, to MIs, and system design plan	4	
design plan Identify extent of hazardous area zoning for relief valve vent stacks and position stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight- LDF and Appliance Pipework Connection Test Purge installation (regulator only) Carry out functionality tests on train controls, to Mls (regulator only) Commissioning - General i check all components function correctly to Mls (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels Seal regulators and safety devices	5	Check certificate confirming date and results of strength test
stacks accordingly Join intermediate pressure pipework with flange and union fittings (regulator only) Check installation is gas tight- LDF and Appliance Pipework Connection Test Purge installation (regulator only) Carry out functionality tests on train controls, to MIs (regulator only) Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points - metering pressure - single stream meter installation - Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points - metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	6	
9 Check installation is gas tight- LDF and Appliance Pipework Connection Test 10 Purge installation (regulator only) 11 Carry out functionality tests on train controls, to MIs (regulator only) 12 Commissioning - General 1	7	
10 Purge installation (regulator only) 11 Carry out functionality tests on train controls, to MIs (regulator only) 12 Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) 13 Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	8	Join intermediate pressure pipework with flange and union fittings (regulator only)
11 Carry out functionality tests on train controls, to MIs (regulator only) 12 Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) 13 Set points - metering pressure - single stream meter installation - Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points - metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point iii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	9	Check installation is gas tight- LDF and Appliance Pipework Connection Test
12 Commissioning - General i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) 13 Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	10	Purge installation (regulator only)
i check all components function correctly to MIs (regulator only) ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	11	Carry out functionality tests on train controls, to MIs (regulator only)
 ii set safety system control pressures and test, prior to regulator iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) 13 Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system Test any disturbed joints/pipework for gas tightness Display notices and labels Seal regulators and safety devices 	12	Commissioning - General
iii ensure regulator is operating in full control prior to opening outlet valves iv check set points of regulators under flow conditions (simulation can be used) Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	i	check all components function correctly to MIs (regulator only)
iv check set points of regulators under flow conditions (simulation can be used) Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	ii	set safety system control pressures and test, prior to regulator
13 Set points – metering pressure – single stream meter installation – Figures 20/21 IGE/GM/8 Part 1 i set active regulator at determined set point ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	iii	ensure regulator is operating in full control prior to opening outlet valves
i set active regulator at determined set point set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points − metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	iv	check set points of regulators under flow conditions (simulation can be used)
 ii set SSV above relief valve set pressure (take into account accuracy of class of relief valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices 	13	
valve and SSV to ensure relief valve is not restricted) (47.5 mbar) iii check SSV set point plus accuracy group tolerance (MIP) ≤ STP of downstream system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	i	set active regulator at determined set point
system 14 Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1) i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	ii	·
 i set active regulator at determined set point ii set monitor regulator at determined set point iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system Test any disturbed joints/pipework for gas tightness Display notices and labels Seal regulators and safety devices 	iii	
ii set monitor regulator at determined set point set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system Test any disturbed joints/pipework for gas tightness Display notices and labels Seal regulators and safety devices	14	Set points – metering pressure (twin stream installation, IGE/GM/8 Part 1)
iii set SSV above relief valve set pressure (take into account accuracy of relief valve and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	i	set active regulator at determined set point
and SSV to ensure relief valve is not restricted) iv check SSV set point plus accuracy group tolerance (MIP) does not exceed STP of downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	ii	set monitor regulator at determined set point
downstream system 15 Test any disturbed joints/pipework for gas tightness 16 Display notices and labels 17 Seal regulators and safety devices	iii	· · · · · · · · · · · · · · · · · · ·
16 Display notices and labels 17 Seal regulators and safety devices	iv	, , , , , , , , , , , , , , , , , , , ,
17 Seal regulators and safety devices	15	Test any disturbed joints/pipework for gas tightness
	16	Display notices and labels
	17	Seal regulators and safety devices
A COMPANIE AND A STATE OF THE S		
Specific requirements for MP fed diaphragm meter installations	1	Specific requirements for MP fed diaphragm meter installations
2 Specific requirements for MP fed RD meter installations	2	Specific requirements for MP fed RD meter installations

2	On a series to a tractic and a series that the	
3	Commissioning instrumentation (calibration)	
4	Handover (only to a competent FCO if supply is interrupted)	
5	Terms and acronyms used	
6	Understanding regulated network standard operating conditions	
9	Maintenance of regulators and safety controls on meter installations	
10	Set points and tolerances for twin stream meter installations with 21 mbar metering pressure	
11	Setting monitor regulators above active regulators	
12	Setting relief valves above monitor regulators	
13	Understanding zoning distances of hazardous areas surrounding meter installation fittings and components	
14	Understanding ventilation requirements to meet area/hazardous area classifications	
15	HSL56	
	Reg. 13 Meter Housings 13 (1) to (4)	
	Reg. 14 Regulators 14 (1) & (5 to 7)	
	Reg. 15 Emergency Notices 15 (1 & 2)	
16	Actions undertaken following work (recording and passing on data)	
5. Operation and Positioning of ECV/Isolation Controls and Valves		
Know	ledge & Understanding	
1	Identify incorrectly positioned valves	
2	Identify correctly positioned valves	
3	Demonstrate dealing with incorrectly positioned valves	
4	Identify correct labels and attach to valves	
5	HSL56	
i	Reg.9 1 & 2	

10. U	10. Unsafe situations and emergency notices and warning labels		
Know	Knowledge & Understanding		
1.	Explain dealing with ID installations		
2.	Explain dealing with AR installations		
3.	Explain dealing with AR installations when turning off does not remove the risk		
4.	Situations reportable under RIDDOR – explain reporting to HSE		
5.	Identify correct notices and labels to be used:		
(i)	MP gas supply		
(ii)	Warning notice forms		
(iii)	Advisory notices e.g. work in progress; electrical bonding		
6.	Situations reportable under RIDDOR – explain reporting to HSE		
7.	HSL56. Reg.34 Use of appliances 34 (1) to (3)		