

ACS.CoCDN1 SAFETY ASSESSMENT CRITERIA CHANGEOVER NON-DOMESTIC TO DOMESTIC NATURAL GAS

CoCDN1

Introduction

Tests gas safety competence in core domestic gas work for those holding ND Core Generic Parts A & B.

Comprises:

- 1. Gas safety legislation and Standards.
- 3. Products and characteristics of combustion.
- 4. Ventilation.
- 5. Installation of pipework and fittings.
- 6. Tightness testing and purging.
- 7. Checking and/or setting meter regulators.
- 8. Unsafe situations, use of emergency notices and warning labels.
- 9. Operation and positioning of emergency isolation controls and valves.
- 10. Checking and setting appliance burner pressures and gas rates.
- 11. Operation and checking of appliance gas safety devices and controls.
- 12. Chimney Standards.
- 13. Chimney inspection and testing
- 14. Installation of open, balanced and fan assisted chimney configurations.
- 15. Re-establish existing gas supply and relight appliances.

CBs may adopt Competence and Criteria numbering different to that used in this document.

CB documentation may adopt wording for criteria different to that used in this document, provided the meaning is unaffected.

Range

All domestic gas fittings.

Pre-requisites

ND Core Generic Parts A & B.

References and normative documents

MIs

All relevant Documents as listed in the Legislative, Normative & Informative Document List (LINDL), Inc.:

- HSL56
- GIUSP.

Where a reference point (REF) is listed in this criteria this is only a guide to where the criteria could be resourced, therefore may not be exhaustive.

ACS.SMB.003.ACDND identifies Normative Documents that should be held by ACs.

Abbreviations

AIV. Appliance Isolation Valve

AECV. Additional emergency control valve

CB. Certification Body

CFS. Communal Flue Systems

ECV. Emergency control valve

LDF. Leak detection fluid

MIs. Manufacturer's/manufacturers' instructions

MIV. Meter inlet valve

MOP. Maximum operating pressure

ND. Non-domestic

OP. Operating pressure

OQ. Oral questioning

Ref. Reference.

1. Gas safety legislation and Standards

KNO	WLEDGE & UNDERSTANDING	REF
1.	HSL56 - Reg.36 Duties of Landlords 36 (1) to (12)	

3. Products and characteristics of combustion

PERI	FORMANCE CRITERIA	REF
1.	inspect flame pictures of selection of burners visually and identify those indicating:	
(i)	complete combustion	
(ii)	incomplete combustion	
2.	identify incomplete combustion:	
(i)	around appliance location	
(ii)	in appliance	
3.	CO detectors and indicators:	
(i)	identify detectors and indicators	
(ii)	installation – locations	
(iii)	commission and maintain detectors (audible, readable, visual)	
4.	Combustion performance analysis	
(i)	inspect appliances of 3 types intended for combustion performance testing to ensure installation, flueing and ventilation are to MIs	
(ii)	inspect appliances for obvious signs of damage and factors that may affect combustion performance	
(iii)	check OP and/or heat input of each appliance	
(iv)	light each appliance and visually inspect combustion performance	
(v)	check analyser is suitable, correctly assembled and calibrated	
(vi)	select correct types of sampling probe for each appliance	
(vii)	turn on analyser and prepare for use to MIs	
(viii)	correctly position probes for sampling products from each appliance	
(ix)	adjust position of probe to obtain highest steady value of CO2 or lowest steady value of O2	
	for each appliance	
(x)	read and record CO/CO2 ratios for each appliance	
(xi)	adjust and re-test appliance if CO/CO2 ratio levels are too high	
KNO	WLEDGE & UNDERSTANDING	REF
1.	main constituents of complete and incomplete combustion	
2.	air required for complete combustion	
3.	causes of appliance incomplete combustion at:	
(i)	burner	
(ii)	combustion space	
(iii)	heat exchanger	
(iv)	flue	
4.	symptoms of CO poisoning	
5.	advice to person who describes symptoms of being affected by products of combustion or when indicator/detector has activated	
6.	other sources of CO and CO ₂ in dwellings	
7.	ambient levels of CO in atmosphere	
8.	levels of CO within dwellings and effect on electronic detectors	
9.	causes of activation of CO detectors and indicators	
10.	ambient levels of CO ₂ in atmosphere	
11.	critical levels of CO ₂ that could cause vitiation affecting combustion process	
12.	movement of products of combustion within properties and its effects	
13.	advice to be given when a CO detector has activated	BS7967 2015 7.2
14.		
15.	manufacturing standards for electronic CO detectors (alarms)	+
16.	identify unsafe situation relating to combustion products that could enter a premises	
17.	additional allowances for CO levels for gas cookers	-
18.	Combustion performance analysis	1
	i) re-testing appliances when new components have been fitted	OTUGE
(ii) unsafe situation category for flued appliance that fails test	GIUSP Ed 7.1 Situation Table 7.6

Issue 10.2 © ACS. SMB April 2018

	(iii)	unsafe situation category for flueless appliance that fails test	
	(iv)	understanding of action levels for gas appliances	
	(v)	actions if CO/CO2 ratio remains above suitable performance levels after adjustment	
	(vi)	types of portable combustion analysers	
19	Aware	ness of regional differences in Building Regulations regarding CO detection when	GSR ISU
		ing new or replacement fixed combustion appliances.	037

4. Ventilation

PERFORMANCE CRITERIA	RE	F
1. calculate free area of selection of air bricks (inc. te	rracotta types) and air vents	
2. identify correct and incorrect types of air vents and	d grilles e.g. fly screens	
3. identify inadequate ventilation		
KNOWLEDGE & UNDERSTANDING	RE	F
1. requirements for ventilation		
2. siting ventilation (wall, window, floor, ceiling and d	ucted) direct to outside air, series air vents	
3. restrictions to ventilator/grille locations		
4. installing ventilation grilles and vents		
5. types of grilles and vents		
6. adventitious air supplies		
7. sizing of grilles and vents (free area availability)		
8. calculating ventilation for:		
(i) combustion of open flue appliances		
(ii) compartments (open, balanced and fan assisted flue a		
(iii) multi-appliance installations (multiple open flue and f		
9. ventilation for flueless appliances (inc. cooking, wa	ter heating and space heating)	
10. ventilator location for single and multiple DFE space	e heater installations (inc. flued and flueless)	
11. additional ventilation e.g. extractor fans, cooker ho	ods, driers etc.	
12. labels and notices		
13. effects of oil or solid fuel appliances on ventilation	for DFEs	
14. effects of double glazing, cavity insulation draught	proofing on ventilation provision	
15. identification and installation of in tumescent air ve	ents	
16. operation of passive stack ventilation		
17. ventilation for internal kitchens		

5. Installation of pipework and fittings. Pipe sizes: 6 mm to 35 mm

PERF	FORMANCE CRITERIA	REF
1.	identify installation pipework safety defects	
1a	use of temporary earth continuity bond	BS6891 :2015 8.3.4.
KNO	WLEDGE & UNDERSTANDING	REF
1.	flexible and rigid connections	
2.	pipe supports, clips and fixing	BS6891 2015: 8.8 Table 4
3.	Press end connections jointing requirements	BS6891 2015: 7.4 to 7.4.2 and MI's
4.	Pliable corrugated stainless steel tubing and fittings jointing requirements	BS6891 2015: 7.2.3
5.	Requirements for additional emergency control valves	BS6891 2015: 8.5
6.	ventilation for pipework in ducts	
7.	pipe sizing for appliances- inc. theoretical exercise	BS6891 2015: A3 + Tables A1 & A5
8.	Requirements for pipework:	
(i)	laid in joisted floors & roof spaces	BS6891 2015: 8.9.1/2/3/4/5
(ii)	notching and drilling solid timber floor joists	BS6891 2015: 8.9 to 8.9.9
(iii)	installed in solid floors	BS6891 2015: 8.10 to 8.10.3
(iv)	behind dry lined walls	BS6891 2015: 8.11.3
(v)	within timber/light steel frame walls	BS6891 2015: 8.11.4
(vi)	passing through a timber/light steel frame/masonry wall - accommodating movement	BS6891 2015: 8.20
9.	external surface mounted pipework	BS6891 2015: 8.12
10.	fixing pipework when connected to a meter not securely restrained	BS6891 2015: 8.2

11.	fire stopping in buildings containing flats or maisonettes	BS6891 2015: 8.18
12.	installing pipework inside a protected area	BS6891 2015: 8.19
13.		
14.	pipework for multi-occupancy dwellings	
15.	minimum depth/identification of pipework buried below ground	BS6891 2015: 8.13.12 Table 5 + 8.14
16.	pipework installed under base of a wall or foundations	BS6891 2015: 8.13.21
17.	use of PE pipework	BS6891 2015: 6.5 + 7.8 + 8.15
18.	identify unsafe situation of a MP installation where pipework directly enters premises through rear spigot of meter box	

6a. Tightness testing and purging. Total IV $< 0.035 \text{ m}^3$. (LP)

Up to 1¼ (steel) and/or 35 mm (copper)

1. testing new or existing installations with gas or air: (i) visually inspect the installation to ensure joints made correctly and no open ends (ii) check appliances and ensure AIVs are open (iii) turn off the gas installation at the appropriate valve (iv) connect the pressure gauge to a suitable pressure test point on the installation or, if testing with air, branch of test T-piece (v) if using gas, carry out a let-by test of the closed supply control valve (vi) adjust the pressure to between 7 and 10 mbar. (vii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation falls test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (x) purge installation (xx) record test results 2. locate and repair a gas escape (NOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connecte	PERFO	DRMANCE CRITERIA	REF
(ii) visually inspect the installation to ensure joints made correctly and no open ends (iii) check appliances and ensure AIVs are open (iii) turn off the gas installation at the appropriate valve (iv) connect the pressure gauge to a suitable pressure test point on the installation or, if testing with air, branch of test T-piece (v) if using gas, carry out a let-by test of the closed supply control valve (vi) adjust the pressure to between 7 and 10 mbar. (viii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if installation fails test, trace and repair escape and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gau			
 (iii) turn off the gas installation at the appropriate valve (iv) connect the pressure gauge to a suitable pressure test point on the installation or, if testing with air, branch of test T-piece (v) if using gas, carry out a let-by test of the closed supply control valve (vi) adjust the pressure to between 7 and 10 mbar. (vii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if installation fails test, trace and repair escape and re-seal test point (xviii) if installation fails test, betting the proper and the results of the proper installation (xvii) if installation fails test of the connections with LDF (xix) purge installation (xxi) purge installation 			
 (iii) turn off the gas installation at the appropriate valve (iv) connect the pressure gauge to a suitable pressure test point on the installation or, if testing with air, branch of test T-piece (y) if using gas, carry out a let-by test of the closed supply control valve (vi) adjust the pressure to between 7 and 10 mbar. (vii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation falls test, trace and repair escape and re-test installation (xviii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) purge installation 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted.			
(iv) connect the pressure gauge to a suitable pressure test point on the installation or, if testing with air, branch of test T-piece (v) if using gas, carry out a let-by test of the closed supply control valve (vi) adjust the pressure to between 7 and 10 mbar. (vii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (QQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drops for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not indivi			
air, branch of test T-piece (v) if using gas, carry out a let-by test of the closed supply control valve (vi) adjust the pressure to between 7 and 10 mbar. (vii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvii) if installation fails test, trace and repair escape and re-test installation (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drops for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness test and when			
 (vi) adjust the pressure to between 7 and 10 mbar. (vii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if installation fails test, trace and repair escape and re-test installation (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drops for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 			
(viii) close the valve and note the gauge reading (viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring (ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation falls test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when	(v)	if using gas, carry out a let-by test of the closed supply control valve	
 (Viii) test for 1 minute. If pressure rises by more than 0.25 mbar, let-by may be occurring if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness test and when 7. actions when a smell of gas persist	vi)	adjust the pressure to between 7 and 10 mbar.	
(ix) if pressure rise is observed, check valve by disconnecting its outlet union and applying LDF to valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when	vii)	close the valve and note the gauge reading	
valve barrel (OQ) (x) on satisfactory completion of let-by test, slowly raise the pressure in the installation to between 20 and 21 mbar (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when			
 (xi) turn off gas or air supply (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xviii) if tightness test is successful, remove pressure gauge and re-seal test point (xviiii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 (xii) allow 1 minute stabilisation; if necessary re-adjust pressure to between 20 and 21 mbar (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if installation fails test, trace and repair escape and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xix) purge installation (xix) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 		20 and 21 mbar	
 (xiii) check for any perceptible movement (fall) of the gauge over the next 2 minute period (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xviii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results locate and repair a gas escape KNOWLEDGE & UNDERSTANDING selection and reading of pressure gauges allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 (xiv) for new installations, or existing installations with no appliances connected check there is no pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
pressure drop (xv) for existing installations, check any pressure drop is within permissible values and there is no smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when			
 smell of gas (xvi) if installation fails test, trace and repair escape and re-test installation (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 (xvii) if tightness test is successful, remove pressure gauge and re-seal test point (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results locate and repair a gas escape KNOWLEDGE & UNDERSTANDING selection and reading of pressure gauges allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 (xviii) when connected to gas, test pressure test point; ECV/AECV outlet connection; regulator connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 	xvi)	if installation fails test, trace and repair escape and re-test installation	
connections and, where appropriate, MIV connections with LDF (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when	xvii)	if tightness test is successful, remove pressure gauge and re-seal test point	
 (xix) purge installation (xx) record test results 2. locate and repair a gas escape KNOWLEDGE & UNDERSTANDING 1. selection and reading of pressure gauges 2. allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. 3. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 (xx) record test results locate and repair a gas escape KNOWLEDGE & UNDERSTANDING selection and reading of pressure gauges allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 locate and repair a gas escape KNOWLEDGE & UNDERSTANDING selection and reading of pressure gauges allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 selection and reading of pressure gauges allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 selection and reading of pressure gauges allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			REF
 allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where no meter is fitted. identifying no perceptible movement on gauge (0·25 mbar water gauge and 0·2 mbar electronic gauge reading to 1 decimal place) allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 	1.	selection and reading of pressure gauges	
 gauge reading to 1 decimal place) 4. allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered 5. electronic token meter tamper devices and their effect on tightness testing 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 	2.	allowed pressure drops for existing installations related to meter size/type, pipe diameter and IV with appliances connected to gas supply and not isolated, inc. E6, U6/G4, U16/G10 and where	
 allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g. flat where supply is not individually metered electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
 electronic token meter tamper devices and their effect on tightness testing dealing with an ECV//AECV/MIV that is letting by actions when a smell of gas persists after completion of a satisfactory tightness test and when 	4.	allowed pressure drop for existing installation to be tested, inc. ECV but no meter installed e.g.	
 6. dealing with an ECV//AECV/MIV that is letting by 7. actions when a smell of gas persists after completion of a satisfactory tightness test and when 			
7. actions when a smell of gas persists after completion of a satisfactory tightness test and when			
ECV/AECV/MIV is turned off, or a leaking installation cannot be repaired		ECV/AECV/MIV is turned off, or a leaking installation cannot be repaired	
8. testing pipework of diameter > 35 mm or total IV > 0.035 m ³			
9. testing prior to alteration or extension to existing installations	9	testing prior to alteration or extension to existing installations	
10. acronyms and symbols	10.	acronyms and symbols	

- calculating IV and PV for installations with E6, U6 G4 meters connected to 35 mm diameter pipework and U16 meters connected to any pipework of diameter \leq 35 mm purging installations of IV \leq 0.02 m³ and those of IV > 0.02 m³
- 12.

6b. Tightness testing and purging. Total IV ≤ 0.035 m^3 (MP)

Up to 1¼ (steel) and/or 35 mm (copper)

PERFORMANCE CRITERIA	REF
Tightness testing existing NG installations for 75mbar <mop 2bar="" a="" miv<="" th="" without="" ≤=""><th></th></mop>	
(IGE/UP/1B Edition 3 Appendix 4 A4.3)	
1. turn off the gas installation at the ECV	
2. connect the pressure gauge to a suitable pressure test point on the installation	
3. carry out a let-by test of the closed ECV as follows:	
(i) adjust the pressure to between 7 and 10 mbar	
(ii) operate the UPSO or excess flow valve reset to balance the pressures either side of the device,	
then allow it to re-shut	
(iii) close the ECV and note the gauge reading	
(iv) check for any perceptible movement (rise) of the gauge reading (>0.25 mbar) over the next 1	
minute period	
(v) if ECV is letting-by the test is suspended, installation made safe and the appropriate Gas	
Emergency Service Call Centre immediately notified (OQ)	
4. Slowly raise the pressure in the installation to between 18 and 19 mbar by opening the ECV then	
turn off the valve	
5. Allow 1minute for temperature and pressure stabilisation, if necessary re-adjust the pressure to	
between 18 and 19 mbar (the test shall not proceed until a stable reading is obtained)	
6. Continue test as from 6a) 1 (xiii) to (xx)	

7. Checking and/or setting meter regulators

KNO	OWLEDGE & UNDERSTANDING	REF
1.	identifying MP meter/regulator installation	
1a.	checking OP using boiler, space heater, cooker and other appliances	

8. Unsafe situations, use of emergency notices and warning labels

PER	FORMANCE CRITERIA	REF
1.	identify unsafe situations	
2.	classify unsafe situations as ID & AR	
3.	label unsafe appliance(s)/installation(s)	
4.		
5.		
5a.	demonstrate procedure for each unsafe situation to GIUSP	
5b.	complete, explain and issue appropriate warning/advisory notices to appropriate	
pers	ons	
KNO	WLEDGE & UNDERSTANDING	REF
1.		
2.	identify correct notices and labels to be used for a MP gas supply	
3.	explain dealing with AR installations/appliances when turning off does not remove the risk	GIUSP Edition 7.1 Fig 1 & 6.2.2
4.	explain dealing with situations that do not meet current standards but are not unsafe	GIUSP Edition 7.1 Foreword

9. Operation and positioning of emergency isolation controls and valves

KNO	WLEDGE & UNDERSTANDING	REF
1.	inside meter positions	
2.	outside meter positions	
3.	multi-occupancy building installations:	
(i)	external risers	
(ii)	internal risers	
(iii)	remote meters	
(iv)	types of isolation valves (AECVs etc.)	

10. Checking and setting appliance burner pressures and gas rates

PER	FORMANCE CRITERIA	REF
Mea	sure OP of an appliance	
1.	assemble and zero a suitable pressure gauge (OQ on electronic gauges)	

2.	dismantle appliance as required; remove pressure test screw; connect gauge via suitable tubing	
3.	light appliance, check and record OP and confirm to MIs	
4.	turn off appliance; remove gauge; replace test point screw; re-establish gas and check test	
	point with LDF	
Mea	sure gas rate of an appliance	
1.	check and record gas rate using gas meter test dial or index (OQ on Smart Meter)	TB112
2.	check measured gas rate; confirm to MIs rated appliance input	
3.	explain requirements for range rated appliances	
KNC	WLEDGE & UNDERSTANDING	REF
1.	reasons for excessive pressure loss at appliance	
2.	effects of excessive pressure at appliance	
3.	effects of meter pressure absorption under full load conditions	
4.	use of electronic pressure gauge (calibration)	

11. Operation and checking of appliance gas safety devices and controls

	ORMANCE CRITERIA. Applies only to those gas safety controls listed in Table 1 detailed practical provision (ACS.SMB.005.PP.TABLE1)	REF
1.	identify gas safety device/control	
2.	check operation of each gas safety control/device is to MIs	
3.	identify gas safety controls/devices which are not working correctly by operation, testing and/or visual/audible methods	
4.	demonstrate diagnosis of faulty gas safety device/control	
5.	isolate gas and electricity supplies, where necessary	
6.	repair or replace faulty gas safety control/devices	
7.	re-establish gas and electrical supplies, where necessary	
8.	check work carried out is gas tight	
9.	confirm correct operation of repaired/replaced gas safety controls/devices to MIs	
10.	explain safe operation of gas safety controls/devices	
KNO	WLEDGE & UNDERSTANDING	REF
1.	demonstrate (explain) principle of operation of each controls/device	
2.	explain sequence of operation of control/devices e.g. liquid expansion thermostat fitted in line with a liquid expansion FSD	

12. Chimney Standards

KNOW	/LEDGE & UNDERSTANDING	REF
1.	existing solid fuel chimneys:	
(i)	suitability – checks required	
(ii)	min. size of unlined chimney used for gas fire before terminal is required	
(iii)	min. size of side openings for slabbed over chimneys	
(iv)	min. cross sectional area of new chimney installations – gas fires	
(v)	operation of dampers and restrictor plates	
(vi)	effects of other fuels on chimneys and need for cleaning	
(vii)	min. void dimensions below appliance connections	
(viii)	catchment spaces and standard dimensions /volumes	
(ix)	types of flue liners – during construction (salt glazed clay etc.), poured/pumped concrete	
	flue liners, flexible flue liners	
(x)	restrictions on use of poured concrete liners	
(xi)	sealing and support for flexible flue liners in chimneys	
(xii)	inspection of chimneys through loft spaces	
(xiii)	chimney heights/appliance types where liners are required	
(xiv)	sealing chimney voids	
(xv)	fitting bird guards to chimneys	
(xvi)	suitable and unsuitable terminals for space heaters inc. radiant, inset and DFE	
2.	pre-cast flue systems:	
(i)	flue design, standards, operation, routing, connection, termination	
(ii)	min. cross sectional area of new gas flue block	
(iii)	min. requirement of vertical flue blocks before off-sets	
(iv)	jointing material for pre-cast flue blocks	
(v)	min. flue size diameter for connecting pre-cast transfer blocks to termination point	
(vi)	effects of temperature on installation of pre-cast flues	
(vii)	classification of gas appliances i.e. flueless, open flue, room sealed	
3.	chimneys for individual open flue natural draught appliances:	
(i)	construction and operation of chimney	
(ii)	types of chimney material – cement based, and metallic	

(iii)	methods of jointing chimney components	
(iv)	termination positions for chimney outlets	
(v)	ridge terminal positions	
(vi)	effects of adjacent structures; basement areas; light wells and retaining walls on	
()	terminal positions	
(vii)	dealing with downdraught on steeply pitched roofs	
(viii)	restrictions to siting and lengths of chimney run to avoid condensation	
(ix)	min. up-stand for chimneys passing through tiled or slated roofs	
(x)	clearances when passing through combustible material	
(xi) (xii)	chimneys passing adjacent to combustible material or through other dwellings terminals and/or guards – protection against wildlife	
(xiii)	pre-fabricated metal starter box for space heaters	
(xiv)	passive stack ventilation systems in houses with open flue natural draught appliances	
(i)	sealing flues surrounded by enclosures	
4.	fan draught chimneys for open flue appliances:	
(i)	requirements prior to installing fans in secondary flues	
(ii)	additional requirements when fans are installed in secondary flues	
(iii)	fan dilution and shared open flue, fanned draught systems in domestic dwellings	
5.	shared open flue chimneys for natural draught appliances:	
(i)	two or more appliances connected to same flue	
(ii)	appliances with a common flue in same room	
(iii)	labelling appliances on shared flues installed on different floors	
(iv)	maintenance of shared flue systems	
6.	room sealed natural draught chimney configurations for appliances: Identify 2	
-	positions from (ii) to (v).	
(i)	balanced flue construction	
(ii)	outlet positions horizontal to an opening relating to appliance net input	
(iii)	outlet positions below an opening relating to appliance net input	
(iv)	outlet positions above an opening relating to appliance net input	
(v)	outlet options below gutters, soil pipes, drain pipes and eaves	
(vi)	outlet positions in car ports	
(vii)	balanced flue terminal guards	
7.	room sealed fanned draught chimney configurations for appliances:	
(i)	restrictions on lengths, bends etc. for fanned draught room sealed appliances	
_		
(ii)	restrictions for outlet positions inc. horizontal and vertical configurations	
(ii) (iii)	restrictions for outlet positions inc. horizontal and vertical configurations enclosing chimneys	
	enclosing chimneys proximity of flue duct outlets to boundaries	
(iii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without	
(iii) (iv) (v)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility	
(iii) (iv) (v) 8.	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances:	
(iii) (iv) (v) 8. (i)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning	
(iii) (iv) (v) 8. (i) (ii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts	
(iii) (iv) (v) 8. (i) (ii) (iii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction	
(iii) (iv) (v) 8. (i) (ii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS):	
(iii) (iv) (v) 8. (i) (ii) (iii) 9.	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only	
(iii) (iv) (v) 8. (i) (iii) 9. (i)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS	
(iii) (iv) (v) 8. (i) (iii) 9. (i) (ii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation	
(iii) (iv) (v) 8. (i) (iii) 9. (i) (ii) (iii) (iii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (ii) (iii) (iv)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iii) (iv) (v)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iii) (iv) (v) (vi)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iii) (iv) (v) (vi) (vii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances	
(iii) (iv) (v) 8. (i) (ii) (iii) 9. (i) (iii) (iii) (iv) (v) (vi) (vii) (viii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iv) (iv) (v) (vi) (viii) 10.	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues:	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iv) (vi) (vi) (vii) (viii) 10. (i)	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW	
(iii) (iv) (v) 8. (i) (ii) (iii) (iii) (iii) (iv) (vi) (vi	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iv) (v) (vi) (vii) (viii) 10. (i) (iii) (iii)	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iv) (v) (vi) (vii) (viii) (ii) (proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iv) (v) (vi) (vii) (viii) (iii)	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances:	
(iii) (iv) (v) 8. (i) (iii) (iii) 9. (i) (iii) (iv) (vi) (vii) (viii) (iii)	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances: construction and operation of vertex chimney	
(iii) (iv) (v) 8. (i) (iii) (iii) (iii) (iii) (iv) (vi) (vi	enclosing chimneys proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling are placement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances: construction and operation of vertex chimney min. height of appliance draught break above roof insulation	
(iii) (iv) (v) 8. (i) (iii) (iii) (iii) (iii) (iv) (vi) (vi	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances: construction and operation of vertex chimney min. height of appliance draught break above roof insulation exchange of information and planning for chimneys:	
(iii) (iv) (v) 8. (i) (iii) (iii) (iii) (iii) (iv) (vi) (vi	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances: construction and operation of vertex chimney min. height of appliance draught break above roof insulation exchange of information and planning for chimneys: requirements of designer, builder, provider or installer when installing gas chimneys	
(iii) (iv) (v) 8. (i) (iii) (iii) (iii) (iii) (iv) (vi) (vi	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances: construction and operation of vertex chimney min. height of appliance draught break above roof insulation exchange of information and planning for chimneys: requirements of designer, builder, provider or installer when installing gas chimneys chimney certificates	
(iii) (iv) (v) 8. (i) (iii) (iii) (iii) (iii) (iv) (vi) (vi	proximity of flue duct outlets to boundaries identify unsafe situation where a room sealed fanned flue system is enclosed without sufficient inspection facility balanced compartments for open flue appliances: ducted air positioning cross sectional areas of air inlet ducts compartment construction room sealed appliances for shared chimneys (SE-ducts, U-ducts and CFS): *CFS reference only construction and operation of SE-ducts, U-ducts and CFS categories of appliances suitable for installation chimney outlet positions for roof terminals labelling air inlet ducts labelling replacement appliances maintenance of shared flue systems requirements for replacement appliances NRV requirements for appliance/exhaust ducts for CFS condensing flues: condensate disposal position and termination for appliances of heat input ≤ 4 kW plume management kits differing air inlet duct and terminal positions terminal guards plum kit air inlets chimneys for vertex appliances: construction and operation of vertex chimney min. height of appliance draught break above roof insulation exchange of information and planning for chimneys: requirements of designer, builder, provider or installer when installing gas chimneys	

(ii)	Reg.30 Room sealed appliances (1) to (3)	
(iii)	Reg.32 Flue dampers (2) and (3)	

13. Chimney inspection and testing

PERFO 1.	RMANCE CRITERIA	REF
L.	inspect chimney visually throughout its length to verify (both correct and	
/: \	incorrect installations):	
i) ii)	fitness for intended appliance serves only one room or appliance	
iii)	terminal position meets current legal requirements	
iv)	joint between terminal and chimney system is weather tight	
	chimney pipe adapter is correct	
v)	adequate support	
vi)	clearance from obstructions	
vii)	no corrosion or cracking	
viii)	use of bends meets current requirements	
ix)	appliance draught diverter is correctly installed and in good condition	
x)	secondary flue correctly positioned and in good condition	
xi)	starter block correctly sized and positioned	
xii)	catchment space correct and free from debris	
xiii)	joints correctly made	
xiv)	no visual signs of spillage of combustion products	
xiv)(a) ridge terminal and flue adapter are correct, in good condition and properly connected	
κv)	correct space allocated between flue and combustible material	
xvi)	flexible flue liner is correctly sealed at base and terminal position	
xvii)	seals on balanced natural and fan assisted flues are in good condition and correctly installed	
xviii)	balanced flue appliance seals are in good condition and correctly installed	
(ix)	connection into a pre-lined chimney (clay)is correct	
	natural draught chimneys, metallic flexible flue liners:	
i)	annular space around flue and void at base of chimney is correctly sealed (supplementary OQ(s) on effects/hazards of unsealed flue liners and voids)	
ii)	flexible flue liner is correctly clamped and sealed at base and terminal position	
iii)	identify incorrect use of flue liners (supplementary OQ(s) on application of flexible flue liners)	
3.	plastic flue pipe systems:	
i)	plastic flue is classified	
ii)	join plastic flue pipe using correct methods, agents and fittings	
	chimneys for vertex appliances:	
i)	classify balanced/fan assisted and vertex flue systems	
ii)	cut flue duct square, assemble, adjust and seal to MIs	
iii)	fit correct flue terminal guard	
iv)	number of bends within flue length is to MIs (fan assisted)	
v)	seals on balanced natural and fan flues are in good condition and correctly installed	
vi)	balanced flue appliance seals are in good condition and correctly installed	
vii)	vertex flue system operates correctly (supplementary OQ(s) on operation of vertex flues)	
viii)	min. height of flue break above roof insulation is correct	
ix)	calculate ventilation for a vertex flue to MIs	
	record incorrect flue installations	
	apply flue flow test (smoke test)(open flue/chimney systems only):	
i)	check adequate air supply for combustion is available to appliance requirements	
ii)	close windows and doors in room or compartment where flue is to be tested	
iii)	pre-warm chimney, if necessary	
iv)	position smoke pellet correctly at base of chimney being tested	
v)	check smoke is seen to discharge from correct chimney or terminal only	
vi)	check no entry of smoke into room/compartment or any other room/compartment, roof	
,	space or any part external to chimney	
vii)	rectify any fault found and re-test chimney	
	apply spillage test with appliance connected and in operation:	
(i)	close windows, adjustable vents and doors in room/compartment containing appliance to	
	be tested	

Issue 10.2 \circledcirc ACS. SMB April 2018

(ii)	check ventilation and turn off any mechanical ventilation supplied to room other than combustion air	
(iii)	operate/open any fans or passive stack ventilation systems – extract fans, radon extract fans, circulating fans, ceiling paddle fans etc.	
(iv)	with appliance in operation at its set input setting, apply smoke match to appropriate position in appliance to MIs	
(v)	check smoke is correctly pulled into appliance chimney	
(vi)	rectify any fault found and re-test appliance (OQ re testing for spillage with all interconnecting doors open with all fans in operation)	
4.	identify defective chimney installations	
5.	check room sealed fan assisted positive pressure appliance installation:	
(i)	identify positive pressure appliance	
(ii)	fit appliance case correctly (case screws, seals, items trapped between case seal and appliance etc.)	
6.	check room sealed fan assisted positive pressure appliance case seals for	
	possible leakage of products of combustion:	
(i)	set appliance controls to their highest setting and light burner	
(ii)	check case seal initially by running a hand around boiler case and back plate (OQ re corroded/damaged back plate)	
(iii)	light a match/taper and position flame very close to case seal or any possible leakage point	
(iv)	move match/taper around entire seal inc. bottom of case	
(v)	identify any leakage of products of combustion	
KNOV	VLEDGE & UNDERSTANDING	REF
1.	room sealed positive pressure combustion chamber appliances:	
(i)	causes of leakage of products of combustion	
(ii)	checks prior to fitting case inc. back plate inspection, appliance case screws, case seals etc.	
(iii)	installation and spillage testing new or used appliances when MIs are not available	
2.	Actions required where fumes, smells or spillage have been reported/encountered	BS7967
	Actions required timese fames, sinche of spinlage have been reported/encountered	2015 6.1

14. Installation of open, balanced and fan assisted chimney configurations

	ORMANCE CRITERIA	REF
	flue chimney installation – identify correct and incorrect installations:	
1.	cement based and metallic rigid:	
(i)	chimney jointing	
(ii)	chimney adapters	
(iii)	chimney bends	
(iv)	chimney supports	
(v)	spacing between chimney and combustible material	
(vi)	ridge terminals and ridge tile adaptor	
(vii)	flueing into a pre-lined chimney (clay lined)	
2.	flexible flue liners:	
(i)	joining at base and at chimney outlet using appropriate adaptors	
(ii)	clamping at chimney outlet position	
(iii)	sealing of annular space between liner and chimney	
(iv)	sealing of voids at chimney base – pipework etc.	
3.	plastic flue pipe - flue pipe jointing	
Balar	nced and fan assisted chimney systems - identify correct and incorrect installations	
1.	natural draught:	
(i)	flue duct cuts	
(ii)	assembled, adjusted and sealed to MIs	
(iii)	flue terminal guards against balanced flue terminal	
2.	fan assisted:	
(i)	number of bends within flue duct length is to MIs	
(ii)	calculate ventilation for a vertex system	
KNO	WLEDGE & UNDERSTANDING	REF
1.	insulation of chimneys for open flue appliances	
2.	condensing appliance chimneys	
3.	chimney maintenance	
4.	guards for balanced flue terminals	
5.	effects and hazards of inadequately sealed flue liners	
6.	incorrect applications of flue liners	
7.	identify difference between vertex systems and vertical room sealed chimney configurations	

15. Re-establish existing gas supply and relight appliances

PERF	PERFORMANCE CRITERIA	
1.	check installation is gas tight	
2.	re-establish gas supply	
3.	visually check appliance(s) and re-light inc.:	
(i)	purge system and appliance(s) of air	
(ii)	re-light appliance(s)	
(iii)	confirm satisfactory operation of user controls	
(iv)	visually inspect appliance installation(s) for unsafe situations	